PT5DC

Industrial Grade • 0...5, 0...10 Vdc

Absolute Linear Position to 250 inches (6350 mm) **Hard Anodized Aluminum Enclosure High Cycle Applications IP67 • NEMA 6 Protection**



GENERAL

Full Stroke Rai	nge Options	0-10 to 0-250 inches					
Output Signal	Options	05, 010, -5+5, -10+10 VDC					
Accuracy	± 0.75% to ±0.18% fu	Il stroke (see ordering information)					
Repeatability		see ordering information					
Resolution		essentially infinite					
Measuring Ca	ble Options	stainless steel or thermoplastic					
Enclosure Mat	erial	hard anodized aluminum					
Sensor	plas	tic-hybrid precision potentiometer					
Potentiomete	r Cycle Life	see ordering information					
Maximum Me	asuring Cable Velocity	see ordering information					
Maximum Ret	raction Acceleration	see ordering information					
Weight		5 lbs. max.					

ELECTRICAL

Input	14.5-40 VDC (10.5-40	5-40 VDC for 05 and -5+5 volt output)					
Input Curr	ent	10 mA maximum					
Output Im	pedance	1000 ohms					
Maximum	Load	5000 ohms					
Zero and S	Span Adjustment	see ordering information					

ENVIRONMENTAL


Enclosure	NEMA 4/6, IP 65/67
Operating Temperature	-40° to 200°F (-40° to 90°C)
Vibration	up to 10 g to 2000 Hz maximum

EMC COMPLIENCE PER DIRECTIVE 89/336/EEC

20630 Plummer Street • Chatsworth, CA 91311

Emission/Immunity EN50081-2 / EN50082-2




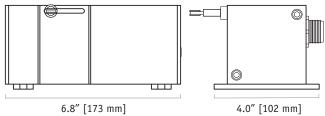


The PT5DC cable-extension transducer uses a unique thermoplastic cable that has virtually an infinite fatigue life. This cable, known as V62, has properties that are superior for high cycle and rugged applications.

Like our other other transducers, the PT5DC installs in minutes, functions properly without perfectly parallel alignment, and fits easily into small areas. The PT5DC offers additional installation flexibility since its cable exit can be rotated relative to the mounting surface, providing four different cable exit orientations.

Output Signal:

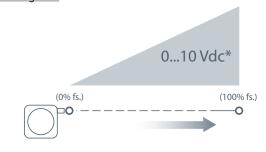


*Additional Output Options: 0...5, -5...+5, -10...+10 Vdc

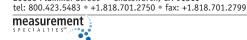




Outline Drawing:

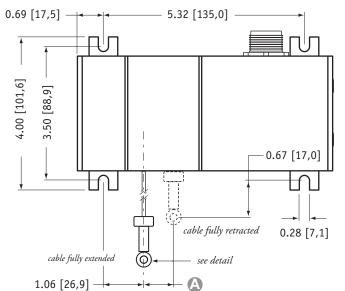



eyelet detail

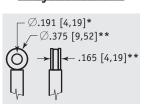

A DIMENSION (inches[mm])

	N34	S47 & V62
RANGE	measuring cable	measuring cable
10	0.05 [1,2]	0.08 [2,0]
15	0.07 [1,8]	0.12 [3,0]
20	0.09 [2,4]	0.16 [3,9]
30	0.14 [3,5]	0.23 [5,9]
40	0.19 [4,7]	0.31 [7,9]
50	0.23 [5,9]	0.39 [9,9]
60	0.28 [7,0]	0.47 [11,8]
80	0.37 [9,4]	0.62 [15,8]
100	0.46 [11,7]	0.78 [19,7]
125	0.58 [14,7]	0.97 [24,7]
150	0.69 [17,6]	1.16 [29,6]
200	0.92 [23,5]	n/a
250	1.16 [29,3]	n/a

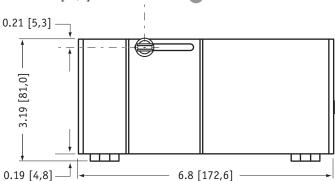

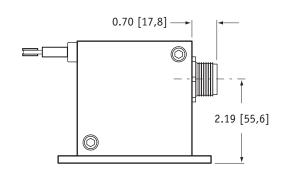

DIMENSIONS ARE IN INCHES [MM] tolerances are 0.03 IN. [0.5 MM] unless otherwise noted.

** tolerance = +.005 -.005 [+.13 -.13]

Ordering Information:

Model Number:



Sample Model Number:

PT5DC - 100 - N34 - FR - Z10 - M6

R range:

100 inches Measuring cable:

B cable exit:

.034 nylon-coated stainless front

0...10 vdc

• output signal:
• electrical connection:

6-pin plastic connector


Full Stroke Range:

R order code:	10	15	20	25	30	40	50	60	80	100	125	150	200	250	
full stroke range, min:	10 in.	15 in.	20 in.	25 in.	30 in.	40 in.	50 in.	60 in.	80 in.	100 in.	125 in.	150 in.	200 in.	250 in.	
accuracy (±% of f.s.):	.75%	.6%	.5%	.5%	.5%	.3%	.3%	.25%	.25%	.25%	.25%	.18%	.18%	.18%	
repeatability (±% of f.s.):	.1%	.1%	.05%	.05%	.05%	.05%	.05%	.02%	.02%	.02%	.02%	.02%	.02%	.02%	
potentiometer cycle life:	2,500,000 cycles							500,000 cycles				250,000 cycles			
cable tension (20%):		41 ounces										21 o	unces		
max. cable velocity/acceleration:	300 in./sec ● 5 g								120 in./sec • 2 g						


^{*} tolerance = +.005 -.001 [+.13 -.03]

Ordering Information (cont.):


Measuring Cable:

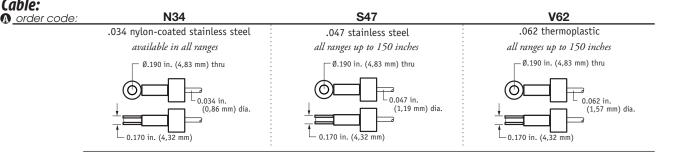


Cable Exit:

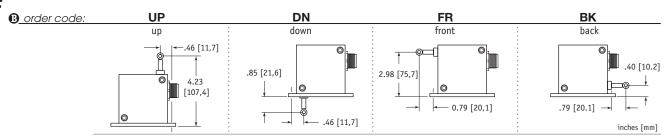


Output Sianals:

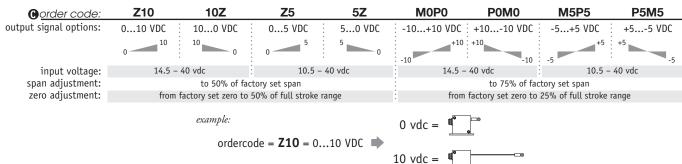

Electrical Connection:

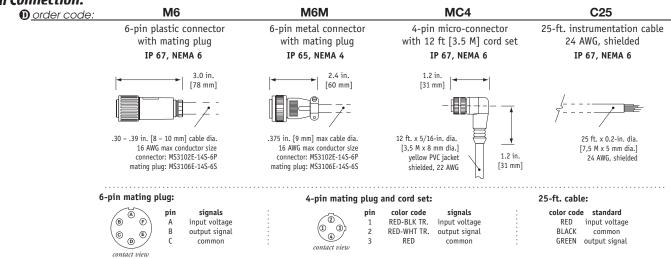


Output Signal Selection (does not apply to -5...+5 & -10...+10 vdc options)

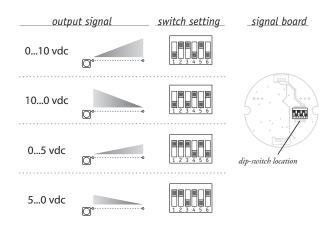

The output signal direction can be reversed at any time by simply changing the dip-switch settings found on the internal signal board. After the settings have been changed, adjustment of the Zero and Span trimpots will be required to precisely match signal values to the beginning and end points of the stroke.

To gain access to the signal board, remove four Allen-Head Screws and remove end cover bracket.

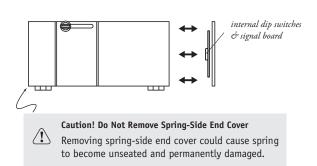

version: 5.0 last updated: March 25, 2014